


SOLO SEAT BRACKET
FOR HARLEY-DAVIDSON SOFTAIL (2000-2017)



INSTALLATION INSTRUCTIONS:

Remove the OEM seat.

Replace the rear fuel tank bracket by the new frame joint (1).

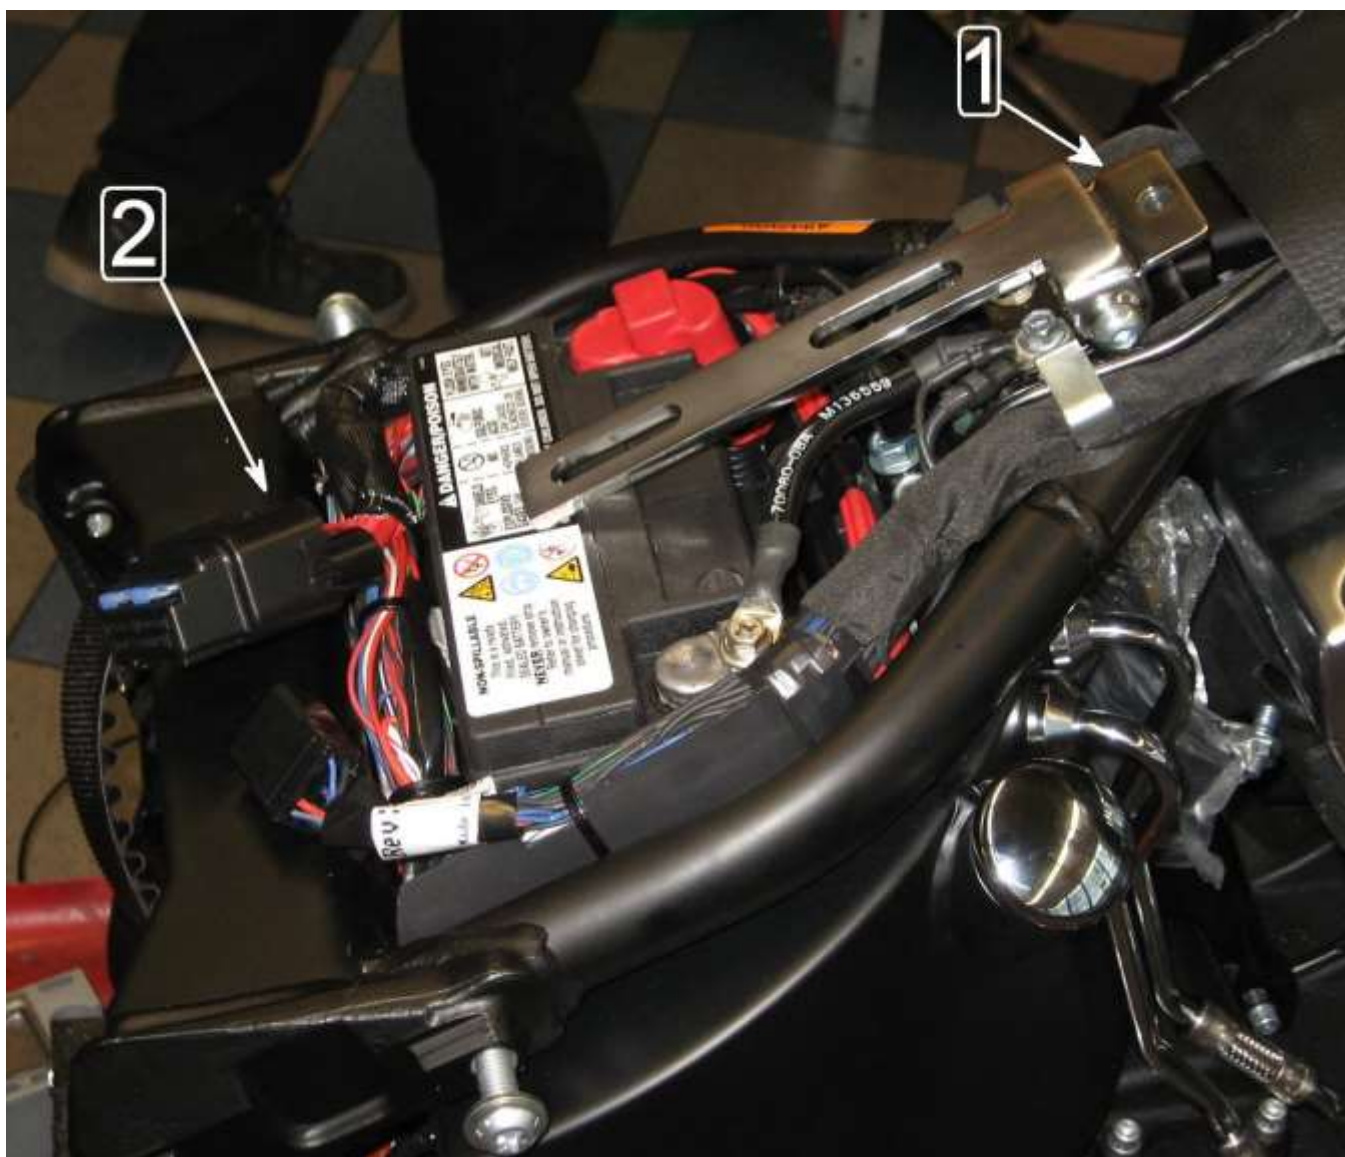


Remove the battery, then remove the complete plastic box and mount the battery again.

Push the ECM (2) in free room behind the battery and relocate the fuse box that way it will fit under the new frame cover.

Push the two flaps of the frame cover (3) under the frame joint.
Push down the rear part of the frame cover.

Mark the positions of the two holes (4) to the frame. Drill there holes of 6.5mm diameter and thread M8 threads in it.

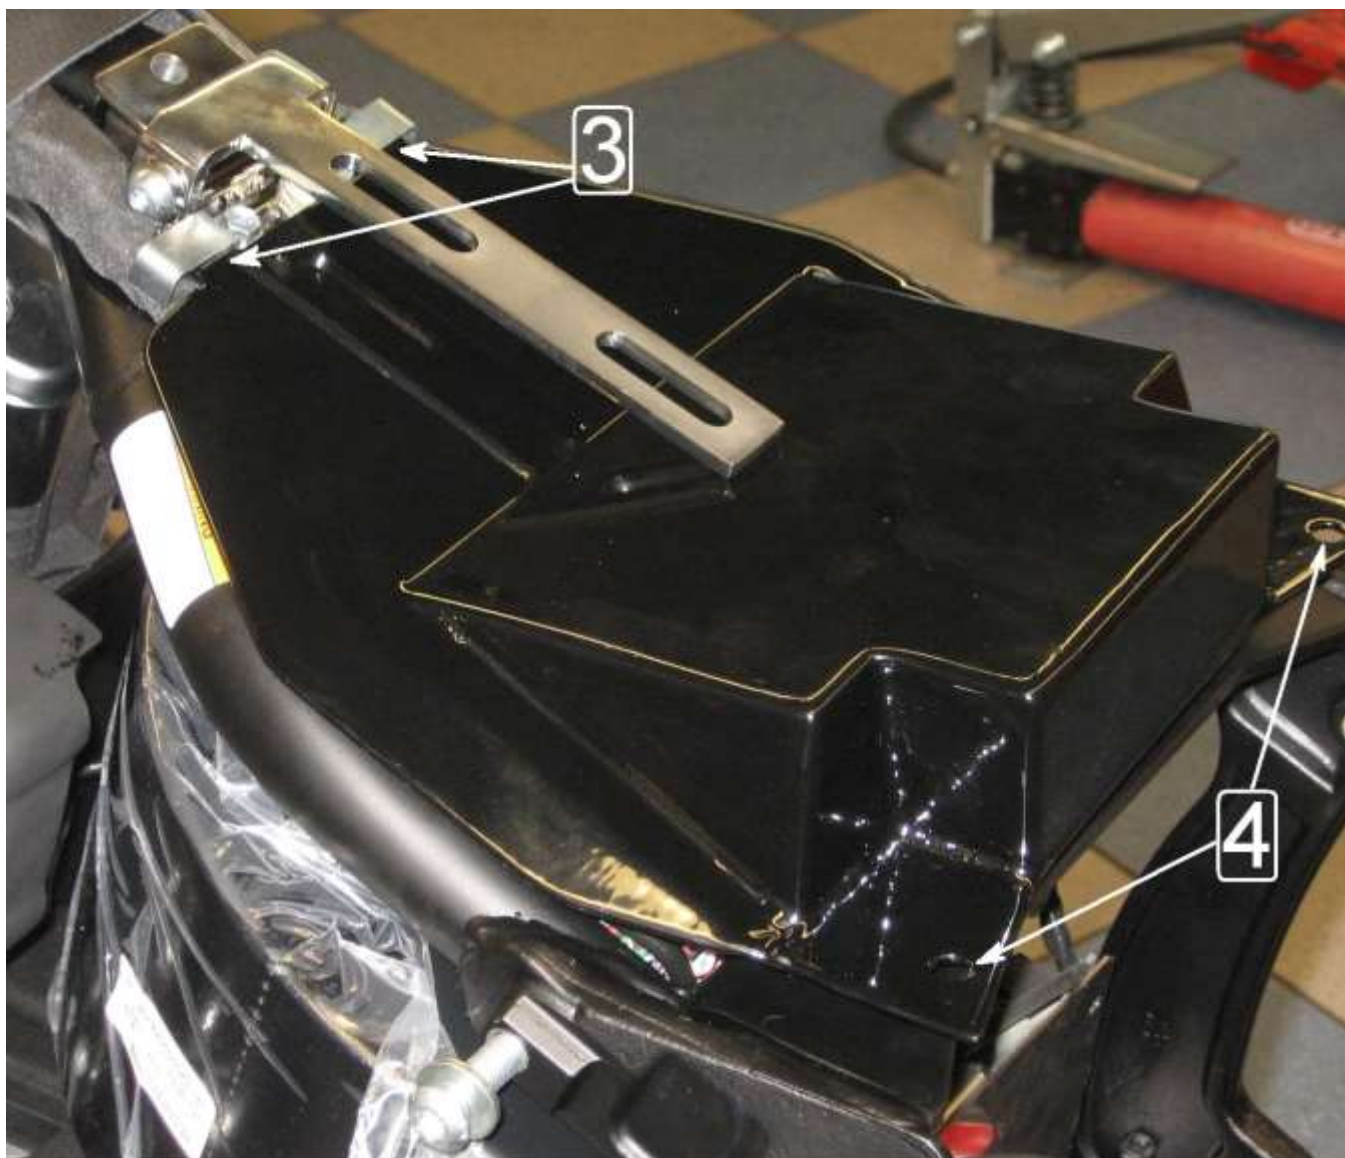

Push the square nut into the rack downside your seat. Mount the front part of the seat to the frame joint, loosely.

Install the seat spring together with the frame cover to the frame.

Mount the seat finally to the frame joint and the springs.

Have fun with it!