



LAY DOWN LICENSE PLATE BRACKET 9165

FITS: H-D MODELS WITH STANDARD "FULL COVERAGE" REAR FENDERS

PART#	INCLUDED
409165	1 Chrome License Plate Holder
409165R	1 Thin Rubber Pad
409165W	1 Thick Rubber Wedge
201021	3 1/4"-28 x 1-1/8" S.H.C.S.
201022	3 1/4"-28 x 3/4" S.H.C.S.
201023	4 1/4"-28 x 1/2" B.S.C.S.
201024	7 1/4"-24 Nylock Nuts – Chrome
201025	4 1/4" I.D. Flat Washers – Chrome

TOOLS SUGGESTED



3/16". 5/32" Allen wrenches, 7/16" Combination wrench, Phillips screwdriver, Small "rat tail" file, Drill with 1/4" bit

NOTES

- 1) Due to the large variation of license plate dimensions, hole patterns, etc., some trimming, hole slotting, or hole enlargement of the plate will most likely be required for proper fit.
- 2) Not all of the included parts will be used in this installation. Components for two different mounting positions are supplied.
- 3) It is up to the owner or end user of the product to determine if the repositioning of the plate conforms with local laws.

PROCEDURE AVERAGE TIME: 30 MINUTES

- STEP 1** Remove the stock license plate bracket from the fender.
- STEP 2** Determine which mounting position you desire. If you like the plate to stand up more upright, similar to the stock orientation, the larger "wedge" shaped rubber base will be used along with the 1-1/8" socket head bolts. If you want the plate to lie down and hug the contour of the fender, use the thin rubber base pad and the 3/4" socket head bolts.
- STEP 3** See PIC.1. (Laydown position pictured – note the placement of the thin rubber pad.) Install the license plate bracket with the appropriate base pad and bolts. Use the existing three holes in the fender from the stock bracket, or in custom applications the holes in the lay down bracket may be used as a drilling template. Place the nylock nuts on the mounting bolts inside of the fender. Make sure the bracket is centered and straight, and tighten securely.
- STEP 4** Place the license plate on the plate bracket and determine if relocation of the holes in the plate is necessary. Drill or elongate the holes as needed.
- STEP 5** Fasten the plate to the new lay down bracket using the button heads, flat washers, and nylock nuts provided.

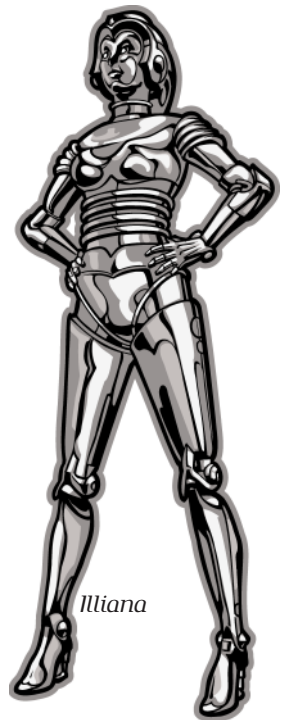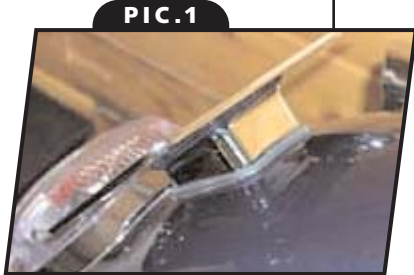

E-MAIL techsupport@kuryakyn.com

WARRANTY Kuryakyn warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer. CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders. ©2001 Kuryakyn USA™ All Rights reserved.