

TACHO-RISER-KIT
FÜR HARLEY-DAVIDSON SOFTAIL-MODELLE (2018-)



PACKLISTE:

Menge	Beschreibung
1	Tacho-Riser-Kit
1	TÜV-Teilegutachten

SPEEDO RISER KIT
FOR HARLEY-DAVIDSON SOFTAIL MODELS (2018-)



PACKING LIST:

Amount	Item
1	Speedo riser kit
1	TÜV certification

MOUNTING INSTRUCTIONS:

Remove the OEM riser (16, 17) and remove the speedo from the upper riser (19).


The items 6, 7 and 8 stay in the upper triple tree.

For mounting the new speedo riser kit use the OEM riser bolts (13) and nuts (2) and tighten them by 40,7-54,3 Nm (30-40 ft-lbs) torque.

Fix the speedo into the new upper riser using the Allen head screws M4x10 and mount the speedo riser kit.

Therefore first bolt on the front screws, then tighten the rear screws of the clamp. (Torque 16,3-21,7 Nm / 12-16 ft-lbs).

Have a nice and safe ride!

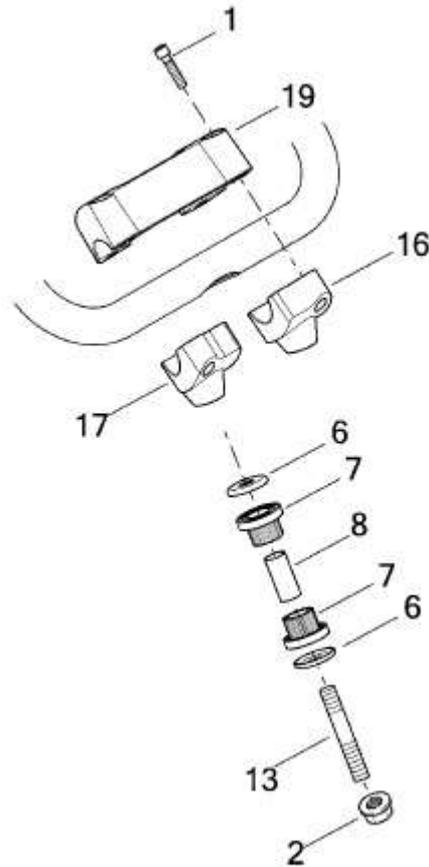

Thunderbike
Güterstrasse 5
D-46499 Hamminkeln
Telefon (0049) 2852 - 6777 - 33
Telefax (0049) 2852 - 5444
info@thunderbike.de