



Custom Dynamics® Dual Color Front Facing Vent Lights Installation Instructions

We thank you for purchasing the Custom Dynamics® Dual Color Front Facing Vent Lights. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: CD-VENT-TF-AW

Package Contents:

- Amber/White Front Facing Vent Light (pair)
- 4" Black Tie Wraps (6)
- 6" Chrome Zip Ties (4)



Fits: 2014-2018 Harley-Davidson® Touring Models with Vent Trim Insert for Batwing Fairings (Electra Glide®, Tri Glide®, and Street Glide® models) - Does NOT Fit CVO™ Models with painted vent.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect the negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.

Notice: Always wear appropriate safety gear including safety glasses when soldering or performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Temperature of bike must be at least 60 degrees F. for tape to properly cure. Read all directions before starting project.

Notice: This product is designed and intended for use as auxiliary lighting on motorcycles only. This product is NOT intended to replace any original equipment lighting installed on the motorcycle and should not be used for that purpose. This product must be wired in such a fashion that it does not interfere with any original equipment lighting.



Installation:

1. Remove the front outer fairing from the bike, if unsure of this process, please refer to manufacturer service manual for details.
2. Attach the LED tube to the Custom Dynamics® vent trim with a tie wrap on each end. The flat side of the tube goes against the mesh in the vent so that the LEDs will shine through the mesh. Make sure wires from vent lights are installed facing outwards. Purple -left and Brown-right.



NOTE: If purchasing the Batwing Fairing vent trim and vent light together, you may install vent light to vent trim before installing onto fairing. For reference on how to install the vent trim please refer to CD-VENT-INSERT-B/C instructions.

3. Unplug Left factory JAE turn signal connector located behind turn signal harness and plug the male and female plugs of Vent Light Pass Through Harness (Purple) into the factory connectors.
4. Unplug Right factory JAE turn signal connector and plug the male and female plugs of the Vent Light Pass Through Harness (Brown) into the factory connectors.
5. Once all connections are complete and plugged in, use any remaining tie-wraps to secure the harness as needed.
6. Re-install the front outer fairing .
7. Test operation of vent light and turn signals in both running and turn modes.

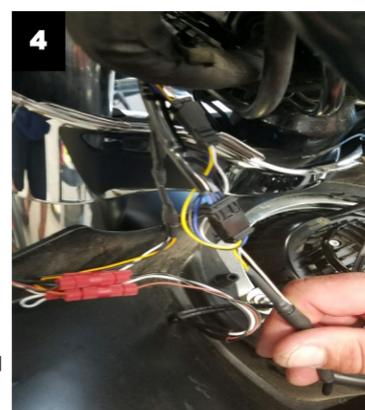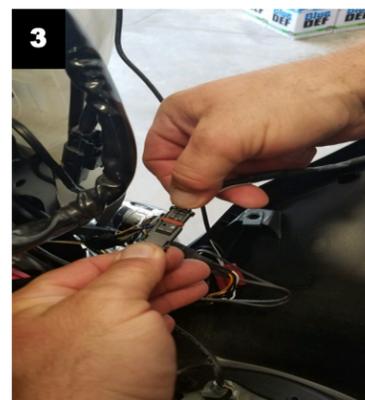

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST