



FLOORBOARD EXHAUST GUARD 7544

TRADITIONAL BOARD-RIGHT SIDE

FITS: TRADITIONAL SHAPE BOARDS

ALL '84-UP ELECTRA GLIDES (EXCEPT '04-'05 FLHTCSE AND '06-UP FLHTCUSE), '84-'96 TOUR GLIDES, '98-UP ROAD GLIDES (EXCEPT '09-UP FLTRSE, '10-UP FLTRX), '94-UP ROAD KINGS (EXCEPT '04-'07 FLHRS, '07-'08 FLHRSE) ALL '86-UP FLST MODELS (EXCEPT '05-UP FLSTN, '05-'06 FLSTFSE, '08-UP FLSTSB, '09-UP FLSTC, '10-UP FLSTSE, AND '10-UP FLSTFB)

PARTS INCLUDED

- 1 Right Side Exhaust Guard Assembly
1 Alcohol Pad
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN! IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Pliers


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the floorboard pad by gently pulling up on the rubber pad, and simultaneously pushing on the rubber darts (PIC 1) protruding from the underside of the floorboard assembly.

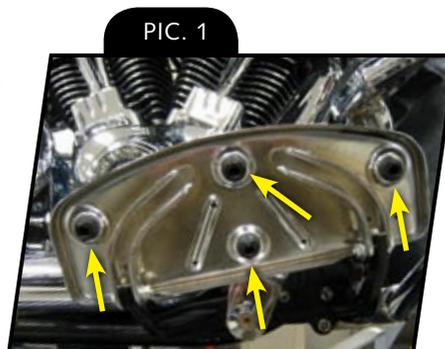

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer...

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 3 Clean the mounting area of the floorboard with the included alcohol pad. If the area is extremely dirty, clean with warm water and a mild soap - rinse and dry completely. Make sure that the area is completely free of contaminants to ensure proper adhesion.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 4 As shown in PIC 2, test fit the exhaust guard to the floorboard. Mark the position of the Exhaust Guard with masking tape to aid in final installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 5 Rub the adhesive backing to activate the adhesive. Remove the adhesive backing and press the exhaust guard in place using the markings made in STEP 4 as a guide. Hold the accent in place for one full minute, full bonding strength will occur in 24 hours.

STEP 6 Replace the floorboard pad by placing pad back in to place and pulling the rubber isolators through the floorboard plate.

Ride On!

Kuryakyn[®]

PIC. 2



PIC. 3



PAGE

2

EXHAUST GUARD

INSTALLATION