

Hurricane Waterproof UTV Cargo Bag Mounting Instructions




Please read instructions carefully before installation. We recommend this product be installed by a qualified, and experienced technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact us or your local dealer for help. Below diagrams show typical installation, your vehicle may be different so please use diagrams as a guide. Make sure your vehicle is clean and free from dirt, road grime etc. where the this product mounts. It is the riders responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position, always check for proper mounting position after loading and before each and every ride. This product is designed to be universal mount, so method of installation may vary depending on your vehicle.

Place the cargo bag in bed of UTV with door flaps facing the rear of the vehicle. For vehicles with a cross bar, use "Strap A" around the bar and thread through the buckle and pull tight.


For vehicles with no rear cross bar, use "Strap B" to pass around a secure part of the vehicle and feed through the strap loop and pull tight. Thread the remaining strap through the buckle and pull tight.

Unclip the front utility panel to gain access to the front mounting locations. Using "Strap B", pass around a secure part of the vehicle and feed through the webbing loop at the end of the strap and pull tight. Thread the remaining strap through the buckle and pull tight. Repeat on the other side of bag.


There is a collapsible shelf between the upper and lower compartments that can be detached from the self-fasteners to make one large main compartment. Always place heavier objects at the bottom of the bag.

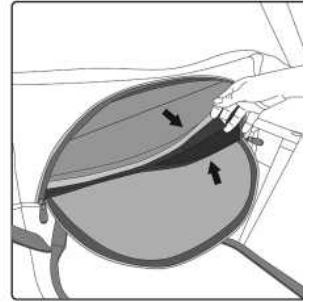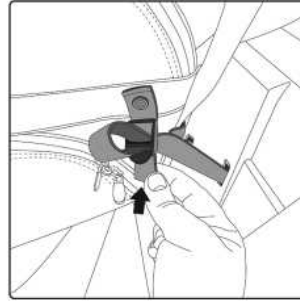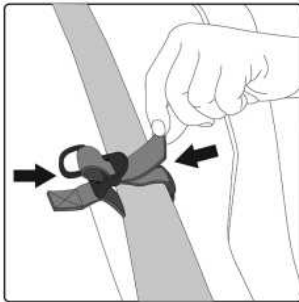

Included Straps

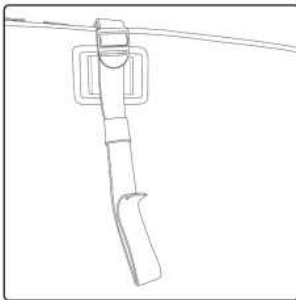


Strap A – fixed to bag

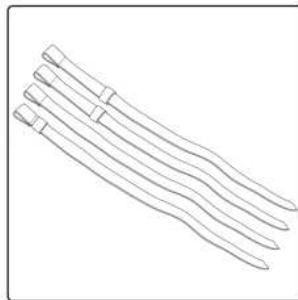


Strap B – QTY (4) loop end straps

Stiffeners

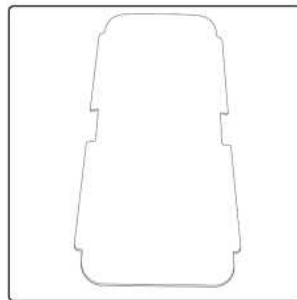

QTY (2) Side Panel

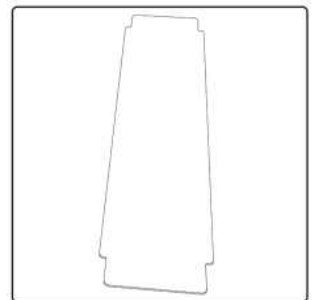

QTY (1) Bottom Panel

Warning

Read the installation instructions and make yourself familiar with the process of installing the Rigg Gear product(s) on your vehicle. It is your responsibility to install the product(s) correctly and securely as outlined in these instructions. Rigg Gear products must not be overloaded or over tightened. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.
Always drive safely. Always wear a helmet and protective apparel.

3518-A Lake Center Dr Santa Ana, CA 92704
 Tel (714)850-1811 Fax (714)850-1848
 e-mail: info@nelsonrigg.com www.nelsonrigg.com

