
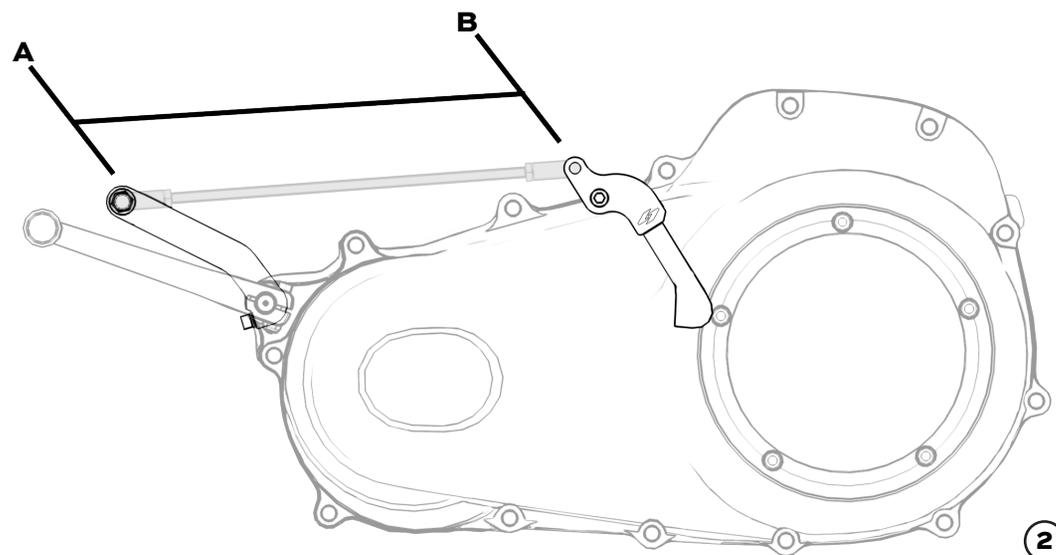


EZ-SHIFT PRODUCT GUIDE

TO BEGIN INSTALLATION...

- Remove shift rod from transmission shift arm (See Fig. 1)
- Install EZ-Shift onto transmission shift arm

TECH TIP: If removing and reinstalling shift components onto spline, try to make the shift arm [A] and transmission shift arm [B] as parallel as possible (See Fig. 2)

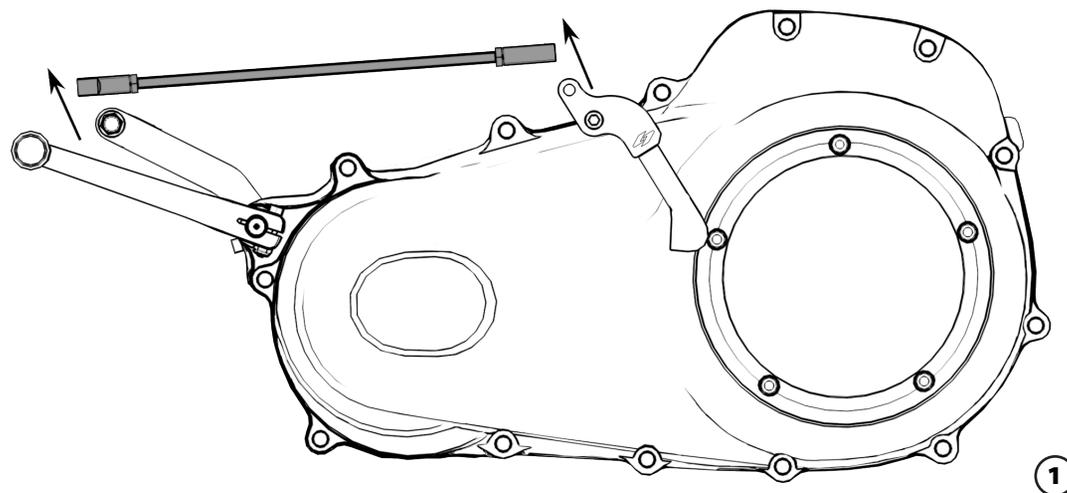

FITMENT:

- M8 Bagger
- M8 Softail

Note: Diagrams depict installation on M8 Bagger;
installation process for M8 Softail models is identical