



## Installation Instructions: Frame-mounted driver backrest kit For FL touring models, 1997-2008

The Mustang driver backrest kit can be used with the stock one-piece seats and with the Mustang one-piece touring seats that have the center opening to accept the backrest. This unit cannot be used with any solo seat or two-piece seat.

**Step 1** Remove the seat from the motorcycle.

**Step 2** For model years 1999-2008, locate the two 1/4-20 studs in the fender and remove the nuts from them. These nuts will be used to attach the driver backrest receiver base. For model years 1997-1998, there are two 5/16 bolts that need to be removed and used later to attach the receiver base.



**Step 3** Locate the pre-drilled hole in the frame member located just above and behind the battery. Slip the supplied flat nut over this hole and align it to accept the supplied 1/4-20 bolt.

**Step 4** Place the receiver base onto the motorcycle by aligning the two studs or screw holes and the single mounting hole; attach and secure using the stock nuts on the two studs or the two 5/16 bolts at the rear and the supplied bolt at the front attachment point.

**Step 5** Re-install the seat and secure with the rear fender screw.

**Step 6** Insert the driver backrest post through the seat opening and into the receiver base.

**Step 7** Adjust height and tilt angle of backrest pad for optimum driver's support and comfort.

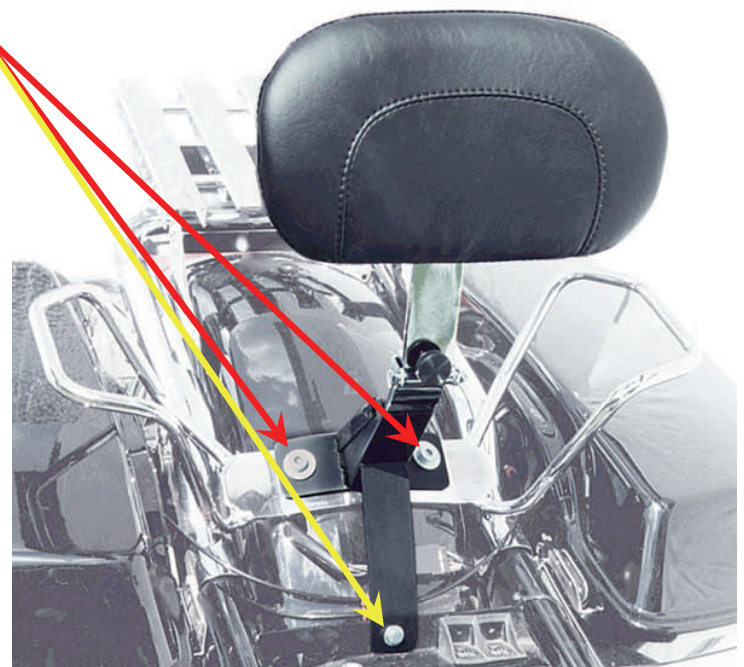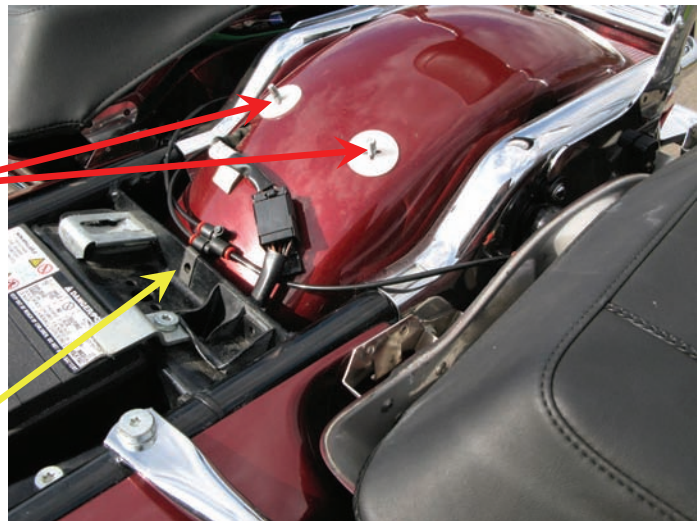

These instructions apply to part numbers:  
79062, 79063, 79065, 79067, 79068, 79070