

# INSTALLATION

### MIRROR STEM EXTENDERS

1444

#### **PARTS INCLUDED**

- 2 Mirror Stem Extender Assemblies
- 2 Long Jam Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

#### THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE

CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR

SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein

can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein

may negatively affect product performance and functionality.

#### **TOOLS SUGGESTED**

Set of Hex Wrenches, Combination Wrenches, Blue Thread-Lock

## STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

#### **PROCEDURE**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.


**STEP 2** Remove the stock mirror by removing the acorn nut (PIC 1) and washer(s). Save the washer(s) and acorn nut, they will be reused. Note the order they were disassembled.

**STEP 3** As shown in PIC 2, install the mirror stem extenders in place where the stock mirrors were removed. Secure loosely with the washer(s) and acorn nut.

**NOTE** Add a small amount of blue thread-lock to the threaded stud before installing the acorn nut.

**STEP 4** As shown in PIC 3, thread the long jam nuts on to the stock mirror stem. The cupped end of the long jam nut should go on first with the hex end being closest to the end of the stem.

-cont.-

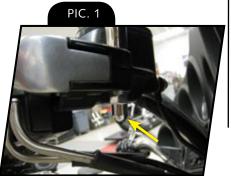

#### **CUSTOMER SERVICE**

877.370.3604 (toll free)

#### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

#### **LIMITED WARRANTY**

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, untained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
  - Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### **ABOUT OUR CATALOG**

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved



**STEP 5** As shown in PIC 4, thread the stock mirror with long jam nut installed in to the mirror stem extender installed in Step 3.

**NOTE** Add a small amount of blue thread-lock to the threaded mirror stem before installing on the mirror stem extender.

**STEP 6** As shown in PIC 4, position the mirror as desired and tighten the long jam nut against the mirror stem extender.

**STEP 7** Tighten the acorn nut to secure the entire assembly to the controls.

**STEP 8** Repeat all steps for the opposite side.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

Ride On!

