

# INSTALLATION GUIDE



### WARRANTY

All Legend Suspensions<sup>TM</sup> parts are guaranteed to the original purchaser to be free of manufacturing defects and workmanship. Merchandise that fails to conform to these conditions will be repaired or replaced at Legend Suspensions<sup>TM</sup> option if the parts are returned to us by the purchaser. Warranty coverage is limited lifetime.

In the event warranty service is required, the original purchaser must call or e-mail Legend Suspensions<sup>TM</sup> immediately with the problem. Some problems can be rectified by a telephone call and need no further course of action.

A part that is suspect of being defective must not be replaced by a Dealer without prior authorization from Legend Suspensiona<sup>TM</sup>. If it is deemed necessary for Legend Suspensions<sup>TM</sup> to make an evaluation to determine whether the part was defective, a return authorization number must be obtained from Legend Suspensions<sup>TM</sup>. The parts must be packaged properly so as to not cause further damage and be returned prepaid to Legend Suspensions<sup>TM</sup> with a copy of the original invoice of purchase. If after an evaluation has been made by Legend Suspensions<sup>TM</sup> and the part was found to be defective, repair will be made at Legend Suspensions<sup>TM</sup> discretion.

- defective, repair will be made at Legend Suspensions™ discretion.

  ADDITIONAL WARRANTY PROVISIONS

  (1) Legend Suspensions™ shall have no obligation in the event a Legend Suspension™ part is modified by any other person or organization.

  (2) Legend Suspensions™ shall have no obligation if a Legend Suspensions™ part becomes defective in whole or in part as a result of improper installation, improper maintenance, improper use, abnormal operation, or any other misuse or mistreatment of the part.

  (3) Legend Suspensions™ shall not be liable for any consequential or incidental damages resulting from the failure of a Legend Suspensions™ part, the breach of any warranties, the failure to deliver, delay in delivery in non-conforming condition, or for any other breach of contract of duty between Legend Suspensions™ and a customer.

  (4) Legend Suspensions™ shall have no warranty or liability obligation if a Legend Suspensions™ part is used in any other application. Vehicles used in competition or off road are exempt from all warranties.

  (5) All warranty items will require the original purchase invoice.

  (6) Legend Suspensions™ shall have no warranty or liability obligation to cover workshap labor charges incurred to install or remove suspension system or individual components.

  (7) Electrical components have a one year manufacturers warranty from the original invoice date or installation.

- agre or installation. (8) Limited lifetime warranty is further defined as the lifetime of specific product line. (9) Customer is liable for shipping charges to and from Legend Suspensions™ for warranty repairs or replacement parts.

WARNING: Legend Suspensions™ assumes no responsibility for damage or injuries which may result from the use or installation of its products, whether or not properly installed or used. Installing a Legend Suspensions system may decrease initial ground clearance when in lowered position. The motorcycle will be lower to the ground and care should be taken to avoid bottoming out, especially over bumps or in turns. To maintain proper balanced geometry, we recommend riding in the stock height position.

All parts sold or manufactured by Legend Suspensions of the stock neight position. All parts sold or manufactured by Legend Suspensions of the control of th








## PROPERLY SUPPORT YOUR MOTORCYCLE PRIOR TO SUSPENSION INSTALLATION!



## STEP ONE: HANDLEBAR CONTROL

- REMOVE OF CLUTCH CLAMP
- RE-USING OE HARDWARE, INSTALL LEGEND HANDLEBAR CONTROL AS SHOWN IN FIGURE A.
- ROUTE CABLE DOWN THE HANDLEBARS AND UNDER THE GAS TANK TO THE BATTERY COMPARTMENT
- SECURE CABLE USING CABLE-TIES

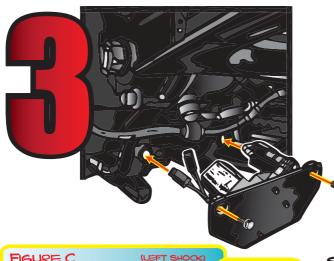

## STEP TWO: WIRING HARNESS REMOVE THE FUSE FROM THE FUSE HOLDER

- B. CONNECT THE HANDLEBAR CONTROL CONNECTOR TO THE MATING CONNECTOR ON THE WIRING HARNESS.
- C. CONNECT RED WIRE TO POSITIVE TERMINAL AND BLACK WIRE TO NEGATIVE TERMINAL ON BATTERY.
- D FROM THE BATTERY COMPARTMENT ROUTE THE COMPRESSOR END (GRAY & BLACK CONNECTORS) OF THE HARNESS TO THE COMPRESSOR LOCATION IN FRONT OF THE REAR WHEEL SHOWN IN FIGURE B

## STEP THREE: COMPRESSOR MOUNT


- REMOVE PLASTIC PLUGS FROM THE BACK OF EACH FRAME RAIL.
- B CONNECT THE GRAY AND BLACK CONNECTORS FROM THE WIRING HARNESS TO THE MATCHING COLOR CONNECTORS ON THE COMPRESSOR ASSEMBLY.
- C CONNECT AIR TUBING TO THE FITTING ON THE COMPRESSOR ASSEMBLY.
- APPLY BLUE THREAD LOCKER TO THE SUPPLIED FASTENERS, AND MOUNT COMPRESSOR ASSEMBLY. AS SHOWN IN FIGURE B, INTO HOLES PREVIOUSLY COVERED IN STEP A
- ROUTE AIR TUBING TO THE BATTERY COMPARTMENT ALONG WITH THE WIRING HARNESS AND SECURE WITH CABLE-TIES. AVOID HOT COMPONENTS.

## STEP FOUR: SHOCKS

- WITH MOTORCYCLE PROPERLY SUPPORTED ON JACK, REMOVE THE OE SHOCKS.
- APPLY BLUE THREAD LOCKER TO THE FASTENERS, AND INSTALL YOUR LEGEND SHOCKS ACCORDING TO THE HARDWARE CONFIGURATION IN FIGURE C, WITH AIR FITTINGS POINTING FORWARD. MOUNT WITH CIRCLIP FACING OUT, AND SILVER LABEL FACING IN
- C TORQUE HARDWARE TO DE SPECIFICATIONS.
- ROUTE AIR TUBING FROM EACH SHOCK AND D. CONNECT TO AIR TUBING FROM THE COMPRESSOR USING SUPPLIED Y-FITTING.



MAKE SURE TUBING IS CUT AT A CLEAN 90° ANGLE

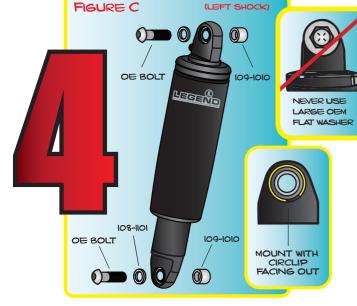

#### PARTS INCLUDED:

(1) 112-2103 - RHS SHOCK (1) 112-2104 - LHS SHOCK (1) 112-1220 - COMPRESS (I) 800-0054 - WIRING HARNESS (I) 200-1711 - HANDLEBAR CONTROL (1) 200-3002 - AIR TUBING, 8 FT (1) 200-3000 - TUBE CUTTER.

(I) 2.00-2.003 - Y-FITTING (4) 109-1010 - SPACER, 050 X 0.75 X 0.75 X (4) 108-101 - SPACER, 050 X 0.75 X 0.12\* (2) 800-0100 - 8.01.T, 5./16 X 1.14\* (2) 800-0101 - LOCK WASHER, 5./16\* (2) 800-0102 - FLAT WASHER, 5./16\*

# STEP FIVE: OPERATION

- REINSTALL THE FUSE IN THE FUSE HOLDER
- B. PUSH TOP BUTTON TO INFLATE SHOCKS, AND BOTTOM BUTTON TO DEFLATE SHOCKS.
- CHECK TIRE TO FENDER CLEARANCE WHEN SHOCKS ARE FULLY COMPRESSED.
- D. WITHOUT SITTING ON THE BIKE, INFLATE SHOCKS UNTIL THE BIKE STOPS RISING
- THE BIKE SHOULD SAG DOWN LESS THAN ONE INCH WHEN YOU SIT ON YOUR BIKE WITH ALL THE WEIGHT YOU WILL BE RIDING WITH.
- F. GO RIDING, AND ADJUST SPRING RATE ON-THE-GO TO YOUR PREFERENCE.

